


RYCO FILTERS



FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA146P.


Suits Hyundai Sonata NF

1 Filter located behind glove box

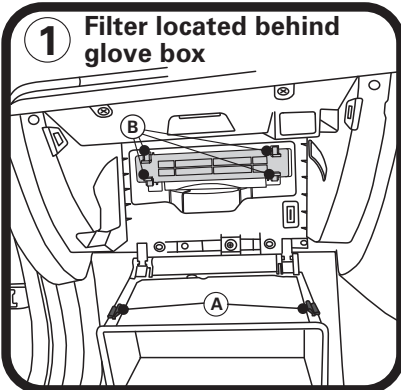


Undo 2 rubber lugs (A), pull glove box down, squeeze 2 handles (B) together & remove the filter cover.

3

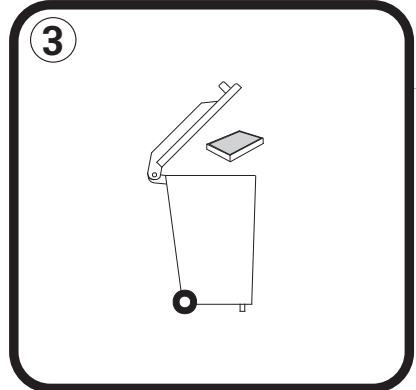

Dispose off used filter properly.

2

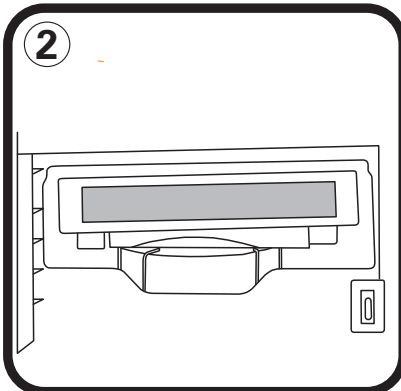

Pull used filter from housing, replace with Ryco RCA146P, Replace previously removed parts.

GUD Automotive Pty Ltd
245 Sunshine Road Tottenham
Victoria 3012 Australia.
www.rycofilters.com.au

GUD (NZ) Ltd
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz