


# RYCO FILTERS



## FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA217C. VOLKSWAGEN TOUAREG (7P) & PORSCHE CAYENNE (S2)

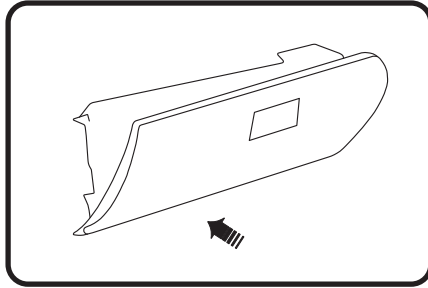

1. The cabin air filter housing is located in the passenger footwell below the glove box compartment.
2. To gain access, slide the passenger seat back and identify the plastic trim covering the area below the glove box.
3. Remove the front 3 screws that secure the unit. Drop it slightly, so the light connector is accessible and disconnect it. Remove the trim completely.
4. Unclip the lid from front corner (facing you) and slide out the old cabin air filter carefully to avoid any accumulated debris from being spread around.
5. Clean the area and slide in the new cabin air filter making sure it is facing in the right air flow direction marked on the filter and refit all components in reverse order.

GUD Automotive Pty Ltd  
29 Taras Ave Altona North  
Victoria 3025 Australia.  
[www.rycofilters.com.au](http://www.rycofilters.com.au)

GUD Automotive -  
A division of GUD (NZ) Holdings Limited  
626A Rosebank Road Avondale  
Auckland, New Zealand  
[www.ryco.co.nz](http://www.ryco.co.nz)